

Air-Seal Installation Manual - Customer Guide

Prepared for Kuquara Integrated Services Limited

1. Confirm tyre size

Read the tyre sidewall and confirm the exact tyre size before calculating quantity.

2. Select application

Choose on-road for normal road-going vehicles and off-road for agricultural, industrial, construction and rough-terrain usage.

3. Calculate quantity

Use the calculator on the product page or the application chart to identify the litres required per tyre.

4. Install through valve stem

Deflate tyre where required, remove the valve core, inject the measured sealant, reinstall valve core and reinflate to correct pressure.

5. Rotate tyre

Move the vehicle slowly or rotate the tyre to distribute sealant evenly.

6. Safety note

Do not guess tyre quantities. For unusual sizes, confirm with Kuquara before installation.

Installer checklist

Item	Check
Tyre size confirmed	
Application selected	
Quantity measured per tyre	
Valve core reinstalled	
Tyre pressure restored	
Customer advised	